
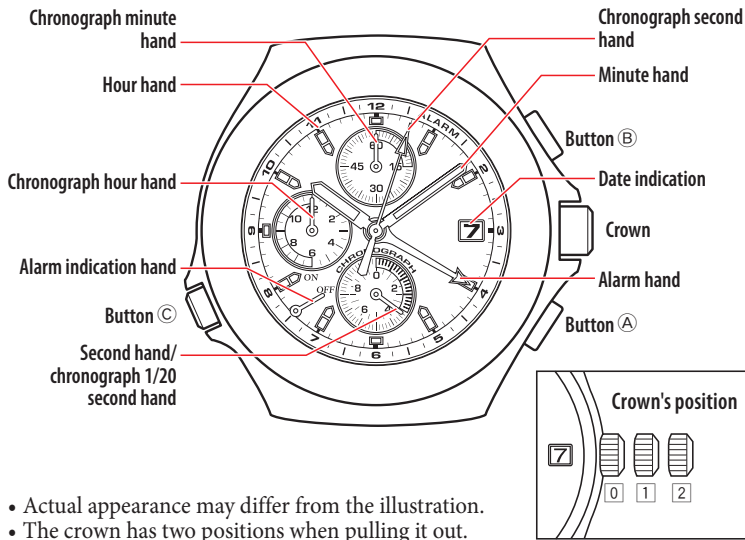


- To see details of specifications and operations, refer to the instruction manual:  058x instruction manual

Component identification



- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.

(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Setting the time

- 1. Pull the crown out to position 2.**
The second hand points to 0 second.
- 2. Rotate the crown to set the time.**
 - Change of date indication shows it just became AM. Take care the time set is AM or PM.
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- 3. Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**
The second hand starts moving.

Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
 - Date indication adjustment is required on the first days of March, May, July, October and December.
- 1. Pull the crown out to position 1.**
 - 2. Rotate the crown counterclockwise to set the date indication.**
 - Rotating the crown clockwise moves the alarm hand and changes the time of alarm setting.
 - 3. Push the crown in to position 0 to finish the procedure.**

Using the chronograph

- Measuring up to 12 hours in 1/20 second increments. As 12 hours passed, the chronograph starts measurement from 0 second again.
- The chronograph 1/20 second hand stops at the 0 second position 30 second after starting measurement and indicates measurement result as measurement is stopped.

- 1. Push the crown in to position 0.**
- 2. Press and release the lower right button (A).**
The second hand stops at the 0 position and becomes ready to work as the chronograph 1/20 second hand.
- 3. Press and release the upper right button (B).**
The chronograph starts moving.

Start/stop: press button (B).

Reset: press button (A).

- Be sure to reset chronograph after finishing measurement.

Adjusting the 0 position of the chronograph second hands

Adjust the positions of the chronograph second hand and the 1/20 chronograph second hand when they do not return to the 0 positions after resetting the chronograph or they settle at wrong positions due to strong shock or other causes.

- 1. Pull the crown out to position 2.**
- 2. Adjust the hands to the 0 position.**
 - Press button (B) to adjust the chronograph second hand.
 - Press button (A) to adjust the chronograph 1/20 second hand.
 - Pressing and holding the buttons move the hands continuously.
- 3. Set the time and push the crown in to position 0.**
- 4. Press and release the lower right button (A).**
The chronograph second hands return to the 0 positions. If not, repeat step 2.

Using the alarm

The alarm time is set in 12-hour basis.

- The alarm sounds as the hour hand comes to the position of the alarm hand while button (C) is pulled out.

- 1. Pull the crown out to position 1.**
- 2. Rotate the crown clockwise to set the alarm time.**
 - Rotating it counterclockwise changes date indication.
- 3. Push the crown in to position 0.**
- 4. Pull the lower left button (C) out.**
The alarm is activated and the alarm indication hand points "ON".

To stop alarm

Push in button (C).

- The alarm sounds for 15 seconds 5 times at intervals of 2 minutes and 45 seconds.

To turn the alarm on/off

Alarm on: pull out button (C).

Alarm off: push in button (C).