

B8188

①

C6911

CITIZEN®

• INSTRUCTION MANUAL

• MANUEL DE INSTRUCTIONS

• 説明書

• 说明书

<AUTOMATIC/HAND WINDING>

Calibers No.82**, 41**, 66**, 69**

Before using this watch

To check the movement number

A case number—4 alphanumeric characters and 6 or more alphanumeric characters—is engraved on the case back. (Figure on the right)

The first 4 characters of the case number represent the movement number of the watch.

In the example on the right, “△△△△” is the movement number.

Engraving position example

The engraving position may differ depending on watch model.

